



PARKOLOR 60 DW



DMX

Mode									Value	Function
1CH	2CH	4CH	3CH CCT	5CH	4CH CCT	6CH	6CH CCT	9CH		
1	1	1	1	1	1	1	1	1	000-255	Dimmer 0-100%
	2						2	2	000-255	Dimmer Fine 0-100%
				2	2	3	3		Strobe	
								000-005	OFF (by default after DFSE see manual)	
								006-010	ON ((by default after DFSE see manual)	
								011-090	Strobe slow to fast	
								091-170	Random Strobe Slow to fast	
								171-255	Synchronized Random Strobe Slow to fast	
				5	4	3	4	4	000-255	Zoom narrow → wide
	2			3		5		000-255	CCT WW → CW Linear	
								000	2700K	
								022	3000K	
								038	3200K	
								064	3500K	
								117	4000K	
								201	4500K	
								226	5000K	
								243	5600K	
								251	6000K	
								255	6500K	
	2		3		4		5	000-255	Cold White 0-100%	
							6	000-255	Cold White Fine 0-100%	
	3		4		5		7	000-255	Warm White 0-100%	
							8	000-255	Warm White Fine 0-100%	
	4	3				6	6	9	Controle	
									000-010	No Function
									011-020	Dim0
									021-030	Dim1
									031-040	Dim2
									041-050	Dim3
									051-060	Dim4
									061-070	Live Mode
									071-080	Theater Mode
									081-140	No Function
									141-150	Fast Dimmer off
									151-160	Fast Dimmer on
									161-170	Dimmer Curve Linear
									171-180	Dimmer Curve Square
									181-190	Dimmer Curve Inverse Square
									191-200	Dimmer Curve S-Curve
									201-255	Zoom Reset

Find the different DMX modes on the manual available by flashing the QR code affixed to the products or by clicking on the link below:

http://tech.starway.eu/225462_PARKOLOR_60DW/225462_PARKOLOR_60DW_ML.pdf

Please note that the manuals are multi-language



STARWAY

22, RUE ÉDOUARD BUFFARD - MONTEVRAIN 77144

France

Tél. : +33 (0)820 230 007

