




ARIANE^{1430FC} V3

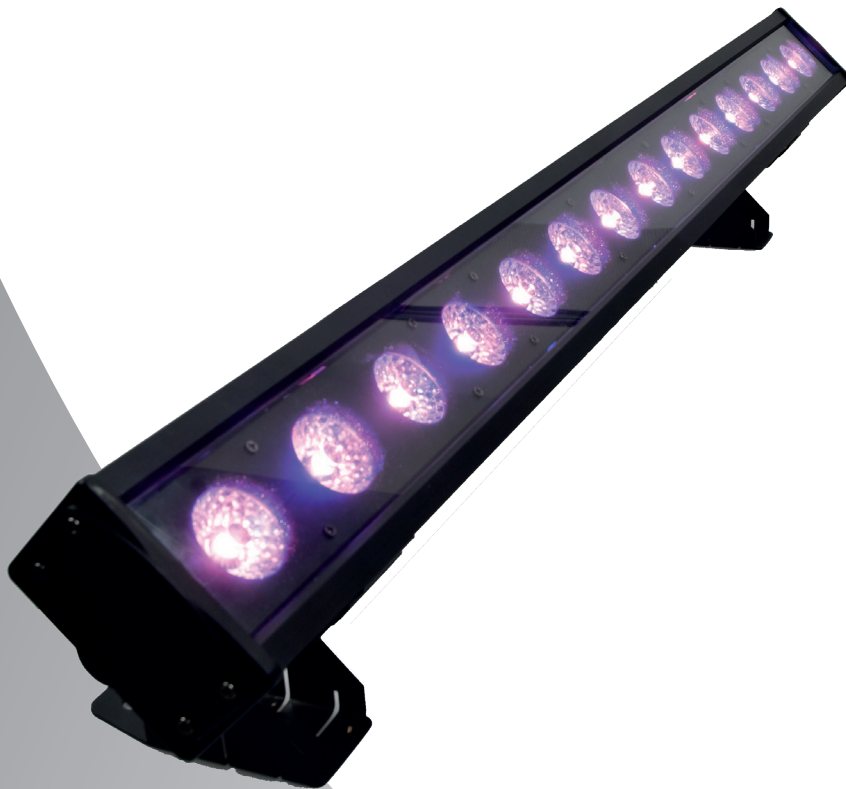

DMX

Table des matières

English Version 9

Mode DMX

Mode 2 Canaux

Canal	Valeur	Fonction
CH1	000-005	Idle
	006-016	Rouge
	017-027	Vert
	028-038	Bleu
	039-049	Jaune
	050-060	Magenta
	061-071	Cyan
	072-082	Blanc
	083-093	Effet Jump 01
	094-104	Effet Jump 02
	105-115	Effet Jump 03
	116-126	Effet Jump 04
	127-137	Effet Jump 05
	138-148	Effet Jump 06
	149-159	Effet Jump 07
	160-170	Effet Jump 08
	171-181	Boucle Effet Jump 01 à 08
	182-192	Effet Rouge
	193-203	Effet Vert
	204-214	Effet Bleu
215-225	Effet Magenta	
226-236	Effet Jaune	
237-247	Boucle effets RGB	
248-255	Audio	
CH2	000-005	ON
	006-010	OFF
	011-255	Strobe Lent à rapide

Mode 3 Canaux

Canal	Valeur	Fonction
CH1	000-255	Rouge, 0% à 100%
CH2	000-255	Vert, 0% à 100%
CH3	000-255	Bleu, 0% à 100%

Mode 5 Canaux

Canal	Valeur	Fonction
CH1	000-255	Dimmer, 0% à 100%
CH2	000-005	ON
	006-010	OFF
	011-255	Strobe Lent à rapide
CH3	000-255	Rouge, 0% à 100%
CH4	000-255	Vert, 0% à 100%
CH5	000-255	Bleu, 0% à 100%

Mode 8 Canaux

Canal	Valeur	Fonction
CH1	000-255	Dimmer, 0% à 100%
CH2	000-005	ON
	006-010	OFF
	011-255	Strobe Lent à rapide
CH3	000-005	Idle
	006-016	Rouge
	017-027	Vert
	028-038	Bleu
	039-049	Jaune
	050-060	Magenta
	061-071	Cyan
	072-082	Blanc
	083-093	Effet Jump 01
	094-104	Effet Jump 02
	105-115	Effet Jump 03
	116-126	Effet Jump 04
	127-137	Effet Jump 05
	138-148	Effet Jump 06
	149-159	Effet Jump 07
	160-170	Effet Jump 08
	171-181	Boucle Effet Jump 01 à 08
	182-192	Effet Rouge
	193-203	Effet Vert
	204-214	Effet Bleu
215-225	Effet Magenta	
226-236	Effet Jaune	
237-247	Boucle effets RGB	
248-255	Audio	
CH4	000-255	Vitesse des effets de lent à rapide
CH5	000-255	Couleur Background
CH6	000-255	Rouge, 0% à 100%
CH7	000-255	Vert, 0% à 100%
CH8	000-255	Bleu, 0% à 100%

Mode 42 Canaux

Canal	Valeur	Fonction
CH1	000-255	1# Rouge, 0% à 100%
CH2	000-255	1# Vert, 0% à 100%
CH3	000-255	1# Bleu, 0% à 100%
CH4	000-255	2# Rouge, 0% à 100%
CH5	000-255	2# Vert, 0% à 100%
CH6	000-255	2# Bleu, 0% à 100%
CH7	000-255	3# Rouge, 0% à 100%
CH8	000-255	3# Vert, 0% à 100%
CH9	000-255	3# Bleu, 0% à 100%
CH10	000-255	4# Rouge, 0% à 100%
CH11	000-255	4# Vert, 0% à 100%
CH12	000-255	4# Bleu, 0% à 100%
CH13	000-255	5# Rouge, 0% à 100%
CH14	000-255	5# Vert, 0% à 100%
CH15	000-255	5# Bleu, 0% à 100%
CH16	000-255	6# Rouge, 0% à 100%
CH17	000-255	6# Vert, 0% à 100%
CH18	000-255	6# Bleu, 0% à 100%
CH19	000-255	7# Rouge, 0% à 100%
CH20	000-255	7# Vert, 0% à 100%
CH21	000-255	7# Bleu, 0% à 100%
CH22	000-255	8# Rouge, 0% à 100%
CH23	000-255	8# Vert, 0% à 100%
CH24	000-255	8# Bleu, 0% à 100%
CH25	000-255	9# Rouge, 0% à 100%
CH26	000-255	9# Vert, 0% à 100%
CH27	000-255	9# Bleu, 0% à 100%
CH28	000-255	10# Rouge, 0% à 100%
CH29	000-255	10# Vert, 0% à 100%
CH30	000-255	10# Bleu, 0% à 100%
CH31	000-255	11# Rouge, 0% à 100%
CH32	000-255	11# Vert, 0% à 100%
CH33	000-255	11# Bleu, 0% à 100%
CH34	000-255	12# Rouge, 0% à 100%
CH35	000-255	12# Vert, 0% à 100%
CH36	000-255	12# Bleu, 0% à 100%
CH37	000-255	13# Rouge, 0% à 100%
CH38	000-255	13# Vert, 0% à 100%
CH39	000-255	13# Bleu, 0% à 100%
CH40	000-255	14# Rouge, 0% à 100%
CH41	000-255	14# Vert, 0% à 100%
CH42	000-255	14# Bleu, 0% à 100%

Mode 44 Canaux

Canal	Valeur	Fonction
CH1	000-255	Dimmer, 0% à 100%
CH2	000-005	ON
	006-010	OFF
	011-255	Strobe Lent à rapide
CH3	000-255	1# Rouge, 0% à 100%
CH4	000-255	1# Vert, 0% à 100%
CH5	000-255	1# Bleu, 0% à 100%
CH6	000-255	2# Rouge, 0% à 100%
CH7	000-255	2# Vert, 0% à 100%
CH8	000-255	2# Bleu, 0% à 100%
CH9	000-255	3# Rouge, 0% à 100%
CH10	000-255	3# Vert, 0% à 100%
CH11	000-255	3# Bleu, 0% à 100%
CH12	000-255	4# Rouge, 0% à 100%
CH13	000-255	4# Vert, 0% à 100%
CH14	000-255	4# Bleu, 0% à 100%
CH15	000-255	5# Rouge, 0% à 100%
CH16	000-255	5# Vert, 0% à 100%
CH17	000-255	5# Bleu, 0% à 100%
CH18	000-255	6# Rouge, 0% à 100%
CH19	000-255	6# Vert, 0% à 100%
CH20	000-255	6# Bleu, 0% à 100%
CH21	000-255	7# Rouge, 0% à 100%
CH22	000-255	7# Vert, 0% à 100%
CH23	000-255	7# Bleu, 0% à 100%
CH24	000-255	8# Rouge, 0% à 100%
CH25	000-255	8# Vert, 0% à 100%
CH26	000-255	8# Bleu, 0% à 100%
CH27	000-255	9# Rouge, 0% à 100%
CH28	000-255	9# Vert, 0% à 100%
CH29	000-255	9# Bleu, 0% à 100%
CH30	000-255	10# Rouge, 0% à 100%
CH31	000-255	10# Vert, 0% à 100%
CH32	000-255	10# Bleu, 0% à 100%
CH33	000-255	11# Rouge, 0% à 100%
CH34	000-255	11# Vert, 0% à 100%
CH35	000-255	11# Bleu, 0% à 100%
CH36	000-255	12# Rouge, 0% à 100%
CH37	000-255	12# Vert, 0% à 100%
CH38	000-255	12# Bleu, 0% à 100%
CH39	000-255	13# Rouge, 0% à 100%
CH40	000-255	13# Vert, 0% à 100%
CH41	000-255	13# Bleu, 0% à 100%
CH42	000-255	14# Rouge, 0% à 100%
CH43	000-255	14# Vert, 0% à 100%
CH44	000-255	14# Bleu, 0% à 100%

Mode 56 Canaux

Canal	Valeur	Fonction
CH1	000-255	1# Dimmer, 0% à 100%
CH2	000-255	1# Rouge, 0% à 100%
CH3	000-255	1# Vert, 0% à 100%
CH4	000-255	1# Bleu, 0% à 100%
CH5	000-255	2# Dimmer, 0% à 100%
CH6	000-255	2# Rouge, 0% à 100%
CH7	000-255	2# Vert, 0% à 100%
CH8	000-255	2# Bleu, 0% à 100%
CH9	000-255	3# Dimmer, 0% à 100%
CH10	000-255	3# Rouge, 0% à 100%
CH11	000-255	3# Vert, 0% à 100%
CH12	000-255	3# Bleu, 0% à 100%
CH13	000-255	4# Dimmer, 0% à 100%
CH14	000-255	4# Rouge, 0% à 100%
CH15	000-255	4# Vert, 0% à 100%
CH16	000-255	4# Bleu, 0% à 100%
CH17	000-255	5# Dimmer, 0% à 100%
CH18	000-255	5# Rouge, 0% à 100%
CH19	000-255	5# Vert, 0% à 100%
CH20	000-255	5# Bleu, 0% à 100%
CH21	000-255	6# Dimmer, 0% à 100%
CH22	000-255	6# Rouge, 0% à 100%
CH23	000-255	6# Vert, 0% à 100%
CH24	000-255	6# Bleu, 0% à 100%
CH25	000-255	7# Dimmer, 0% à 100%
CH26	000-255	7# Rouge, 0% à 100%
CH27	000-255	7# Vert, 0% à 100%
CH28	000-255	7# Bleu, 0% à 100%
CH29	000-255	8# Dimmer, 0% à 100%
CH30	000-255	8# Rouge, 0% à 100%
CH31	000-255	8# Vert, 0% à 100%
CH32	000-255	8# Bleu, 0% à 100%
CH33	000-255	9# Dimmer, 0% à 100%
CH34	000-255	9# Rouge, 0% à 100%
CH35	000-255	9# Vert, 0% à 100%
CH36	000-255	9# Bleu, 0% à 100%
CH37	000-255	10# Dimmer, 0% à 100%
CH38	000-255	10# Rouge, 0% à 100%
CH39	000-255	10# Vert, 0% à 100%
CH40	000-255	10# Bleu, 0% à 100%
CH41	000-255	11# Dimmer, 0% à 100%
CH42	000-255	11# Rouge, 0% à 100%
CH43	000-255	11# Vert, 0% à 100%
CH44	000-255	11# Bleu, 0% à 100%
CH45	000-255	12# Dimmer, 0% à 100%
CH46	000-255	12# Rouge, 0% à 100%
CH47	000-255	12# Vert, 0% à 100%
CH48	000-255	12# Bleu, 0% à 100%
CH49	000-255	13# Dimmer, 0% à 100%
CH50	000-255	13# Rouge, 0% à 100%
CH51	000-255	13# Vert, 0% à 100%
CH52	000-255	13# Bleu, 0% à 100%
CH53	000-255	14# Dimmer, 0% à 100%
CH54	000-255	14# Rouge, 0% à 100%
CH55	000-255	14# Vert, 0% à 100%
CH56	000-255	14# Bleu, 0% à 100%

NOTES


Handwriting practice lines consisting of 20 horizontal dashed lines.

STATION





ARIANE^{1430FC} V3

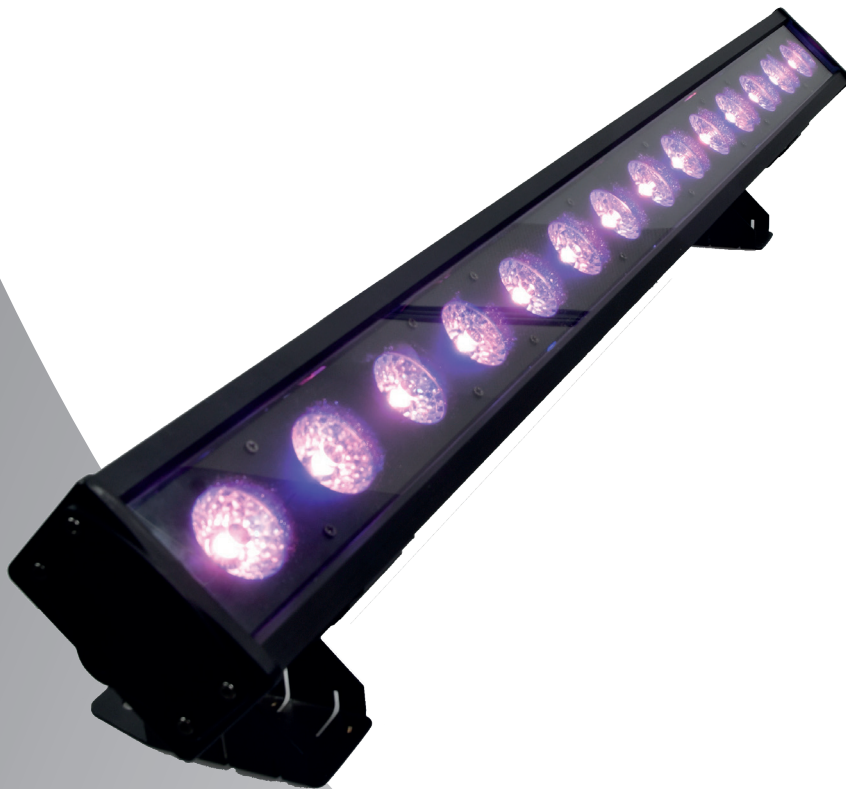

DMX

DMX Map

2 Channel Mode

Channel	DMX Value	Function
CH1	000-005	Off
	006-016	Red
	017-027	Green
	028-038	Blue
	039-049	Yellow
	050-060	Pink
	061-071	Cyan
	072-082	White
	083-093	Jump effect 01
	094-104	Jump effect 02
	105-115	Jump effect 03
	116-126	Jump effect 04
	127-137	Jump effect 05
	138-148	Jump effect 06
	149-159	Jump effect 07
	160-170	Jump effect 08
	171-181	Loops jump effect 01 to 08
	182-192	Red shade effect
	193-203	Green shade effect
	204-214	Blue shade effect
	215-225	Pink shade effect
	226-236	Yellow shade effect
	237-247	Loops red to yellow shade effect
	248-255	Sound active
CH2	000-005	open
	006-010	Black out
	011-255	Strobe Slow to fast

3 Channel Mode

Channel	DMX Value	Function
CH1	000-255	Red Dimming, 0% to 100%
CH2	000-255	Green Dimming, 0% to 100%
CH3	000-255	Blue Dimming, 0% to 100%

5 Channel Mode

Channel	DMX Value	Function
CH1	000-255	Dimmer, 0% to 100%
CH2	000-005	open
	006-010	Black out
	011-255	Strobe Slow to fast
CH3	000-255	Red Dimmer, 0% to 100%
CH4	000-255	Green Dimmer, 0% to 100%
CH5	000-255	Blue Dimmer, 0% to 100%

8 Channel Mode

Channel	DMX Value	Function
CH1	000-255	Dimmer, 0% to 100%
CH2	000-005	open
	006-010	Black out
	011-255	Strobe Slow to fast
CH3	000-005	Off
	006-016	Red
	017-027	Green
	028-038	Blue
	039-049	Yellow
	050-060	Pink
	061-071	Cyan
	072-082	White
	083-093	Jump effect 01
	094-104	Jump effect 02
	105-115	Jump effect 03
	116-126	Jump effect 04
	127-137	Jump effect 05
	138-148	Jump effect 06
	149-159	Jump effect 07
	160-170	Jump effect 08
	171-181	Loops jump effect 01 to 08
	182-192	Red shade effect
	193-203	Green shade effect
	204-214	Blue shade effect
215-225	Pink shade effect	
226-236	Yellow shade effect	
237-247	Loops red to yellow shade effect	
248-255	Sound active	
CH4	000-255	Effects Speed from slow to fast
CH5	000-255	Background color choose
CH6	000-255	Red, 0% to 100%
CH7	000-255	Green, 0% to 100%
CH8	000-255	Blue, 0% to 100%

42 Channel Mode

Channel	DMX Value	Function
CH1	000-255	1# Red, 0% to 100%
CH2	000-255	1# Green, 0% to 100%
CH3	000-255	1# Blue, 0% to 100%
CH4	000-255	2# Red, 0% to 100%
CH5	000-255	2# Green, 0% to 100%
CH6	000-255	2# Blue, 0% to 100%
CH7	000-255	3# Red, 0% to 100%
CH8	000-255	3# Green, 0% to 100%
CH9	000-255	3# Blue, 0% to 100%
CH10	000-255	4# Red, 0% to 100%
CH11	000-255	4# Green, 0% to 100%
CH12	000-255	4# Blue, 0% to 100%
CH13	000-255	5# Red, 0% to 100%
CH14	000-255	5# Green, 0% to 100%
CH15	000-255	5# Blue, 0% to 100%
CH16	000-255	6# Red, 0% to 100%
CH17	000-255	6# Green, 0% to 100%
CH18	000-255	6# Blue, 0% to 100%
CH19	000-255	7# Red, 0% to 100%
CH20	000-255	7# Green, 0% to 100%
CH21	000-255	7# Blue, 0% to 100%
CH22	000-255	8# Red, 0% to 100%
CH23	000-255	8# Green, 0% to 100%
CH24	000-255	8# Blue, 0% to 100%
CH25	000-255	9# Red, 0% to 100%
CH26	000-255	9# Green, 0% to 100%
CH27	000-255	9# Blue, 0% to 100%
CH28	000-255	10# Red, 0% to 100%
CH29	000-255	10# Green, 0% to 100%
CH30	000-255	10# Blue, 0% to 100%
CH31	000-255	11# Red, 0% to 100%
CH32	000-255	11# Green, 0% to 100%
CH33	000-255	11# Blue, 0% to 100%
CH34	000-255	12# Red, 0% to 100%
CH35	000-255	12# Green, 0% to 100%
CH36	000-255	12# Blue, 0% to 100%
CH37	000-255	13# Red, 0% to 100%
CH38	000-255	13# Green, 0% to 100%
CH39	000-255	13# Blue, 0% to 100%
CH40	000-255	14# Red, 0% to 100%
CH41	000-255	14# Green, 0% to 100%
CH42	000-255	14# Blue, 0% to 100%

44 Channel Mode

Channel	DMX Value	Function
CH1	000-255	Dimmer, 0% to 100%
CH2	000-005	open
	006-010	Black out
	011-255	Strobe Slow to fast
CH3	000-255	1# Red, 0% to 100%
CH4	000-255	1# Green, 0% to 100%
CH5	000-255	1# Blue, 0% to 100%
CH6	000-255	2# Red, 0% to 100%
CH7	000-255	2# Green, 0% to 100%
CH8	000-255	2# Blue, 0% to 100%
CH9	000-255	3# Red, 0% to 100%
CH10	000-255	3# Green, 0% to 100%
CH11	000-255	3# Blue, 0% to 100%
CH12	000-255	4# Red, 0% to 100%
CH13	000-255	4# Green, 0% to 100%
CH14	000-255	4# Blue, 0% to 100%
CH15	000-255	5# Red, 0% to 100%
CH16	000-255	5# Green, 0% to 100%
CH17	000-255	5# Blue, 0% to 100%
CH18	000-255	6# Red, 0% to 100%
CH19	000-255	6# Green, 0% to 100%
CH20	000-255	6# Blue, 0% to 100%
CH21	000-255	7# Red, 0% to 100%
CH22	000-255	7# Green, 0% to 100%
CH23	000-255	7# Blue, 0% to 100%
CH24	000-255	8# Red, 0% to 100%
CH25	000-255	8# Green, 0% to 100%
CH26	000-255	8# Blue, 0% to 100%
CH27	000-255	9# Red, 0% to 100%
CH28	000-255	9# Green, 0% to 100%
CH29	000-255	9# Blue, 0% to 100%
CH30	000-255	10# Red, 0% to 100%
CH31	000-255	10# Green, 0% to 100%
CH32	000-255	10# Blue, 0% to 100%
CH33	000-255	11# Red, 0% to 100%
CH34	000-255	11# Green, 0% to 100%
CH35	000-255	11# Blue, 0% to 100%
CH36	000-255	12# Red, 0% to 100%
CH37	000-255	12# Green, 0% to 100%
CH38	000-255	12# Blue, 0% to 100%
CH39	000-255	13# Red, 0% to 100%
CH40	000-255	13# Green, 0% to 100%
CH41	000-255	13# Blue, 0% to 100%
CH42	000-255	14# Red, 0% to 100%
CH43	000-255	14# Green, 0% to 100%
CH44	000-255	14# Blue, 0% to 100%

56 Channel Mode

Channel	Dmx Value	Function
CH1	000-255	1# Dimmer, 0% to 100%
CH2	000-255	1# Red, 0% to 100%
CH3	000-255	1# Green, 0% to 100%
CH4	000-255	1# Blue, 0% to 100%
CH5	000-255	2# Dimmer, 0% to 100%
CH6	000-255	2# Red, 0% to 100%
CH7	000-255	2# Green, 0% to 100%
CH8	000-255	2# Blue, 0% to 100%
CH9	000-255	3# Dimmer, 0% to 100%
CH10	000-255	3# Red, 0% to 100%
CH11	000-255	3# Green, 0% to 100%
CH12	000-255	3# Blue, 0% to 100%
CH13	000-255	4# Dimmer, 0% to 100%
CH14	000-255	4# Red, 0% to 100%
CH15	000-255	4# Green, 0% to 100%
CH16	000-255	4# Blue, 0% to 100%
CH17	000-255	5# Dimmer, 0% to 100%
CH18	000-255	5# Red, 0% to 100%
CH19	000-255	5# Green, 0% to 100%
CH20	000-255	5# Blue, 0% to 100%
CH21	000-255	6# Dimmer, 0% to 100%
CH22	000-255	6# Red, 0% to 100%
CH23	000-255	6# Green, 0% to 100%
CH24	000-255	6# Blue, 0% to 100%
CH25	000-255	7# Dimmer, 0% to 100%
CH26	000-255	7# Red, 0% to 100%
CH27	000-255	7# Green, 0% to 100%
CH28	000-255	7# Blue, 0% to 100%
CH29	000-255	8# Dimmer, 0% to 100%
CH30	000-255	8# Red, 0% to 100%
CH31	000-255	8# Green, 0% to 100%
CH32	000-255	8# Blue, 0% to 100%
CH33	000-255	9# Dimmer, 0% to 100%
CH34	000-255	9# Red, 0% to 100%
CH35	000-255	9# Green, 0% to 100%
CH36	000-255	9# Blue, 0% to 100%
CH37	000-255	10# Dimmer, 0% to 100%
CH38	000-255	10# Red, 0% to 100%
CH39	000-255	10# Green, 0% to 100%
CH40	000-255	10# Blue, 0% to 100%
CH41	000-255	11# Dimmer, 0% to 100%
CH42	000-255	11# Red, 0% to 100%
CH43	000-255	11# Green, 0% to 100%
CH44	000-255	11# Blue, 0% to 100%
CH45	000-255	12# Dimmer, 0% to 100%
CH46	000-255	12# Red, 0% to 100%
CH47	000-255	12# Green, 0% to 100%
CH48	000-255	12# Blue, 0% to 100%
CH49	000-255	13# Dimmer, 0% to 100%
CH50	000-255	13# Red, 0% to 100%
CH51	000-255	13# Green, 0% to 100%
CH52	000-255	13# Blue, 0% to 100%
CH53	000-255	14# Dimmer, 0% to 100%
CH54	000-255	14# Red, 0% to 100%
CH55	000-255	14# Green, 0% to 100%
CH56	000-255	14# Blue, 0% to 100%

STARWAY

22 Rue Edouard Buffard
77144 Montevrain

France

Tél. : +33 (0)820 230 007
Fax : +33 (0)1 46 15 47 16

